


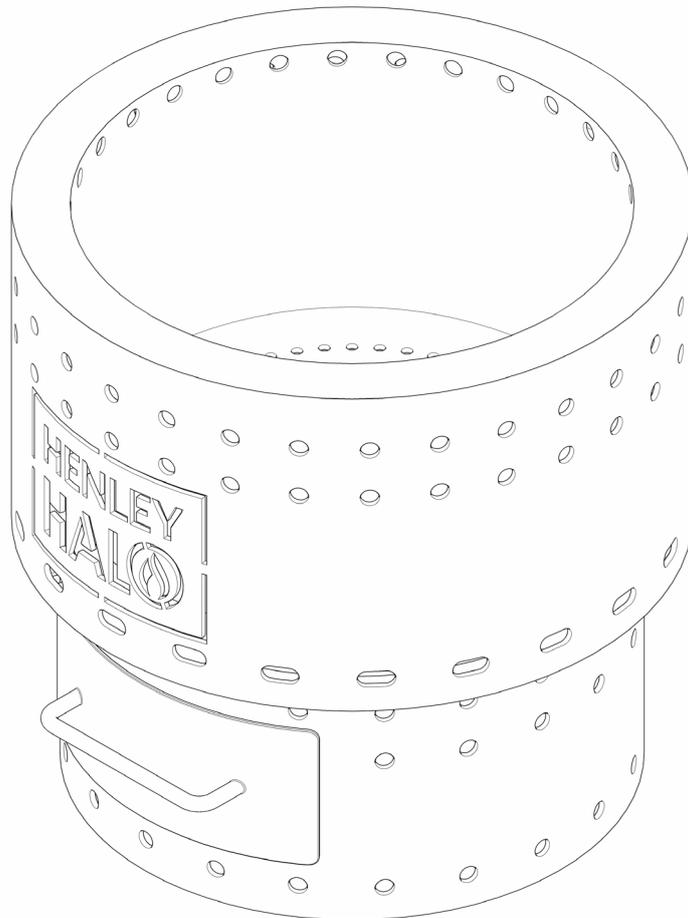


EVERY HOME DESERVES A HENLEY

HALO Wood Pellet Fire Pit Instruction Manual & Safety Instructions

HALO1



**HENLEY
HALO**

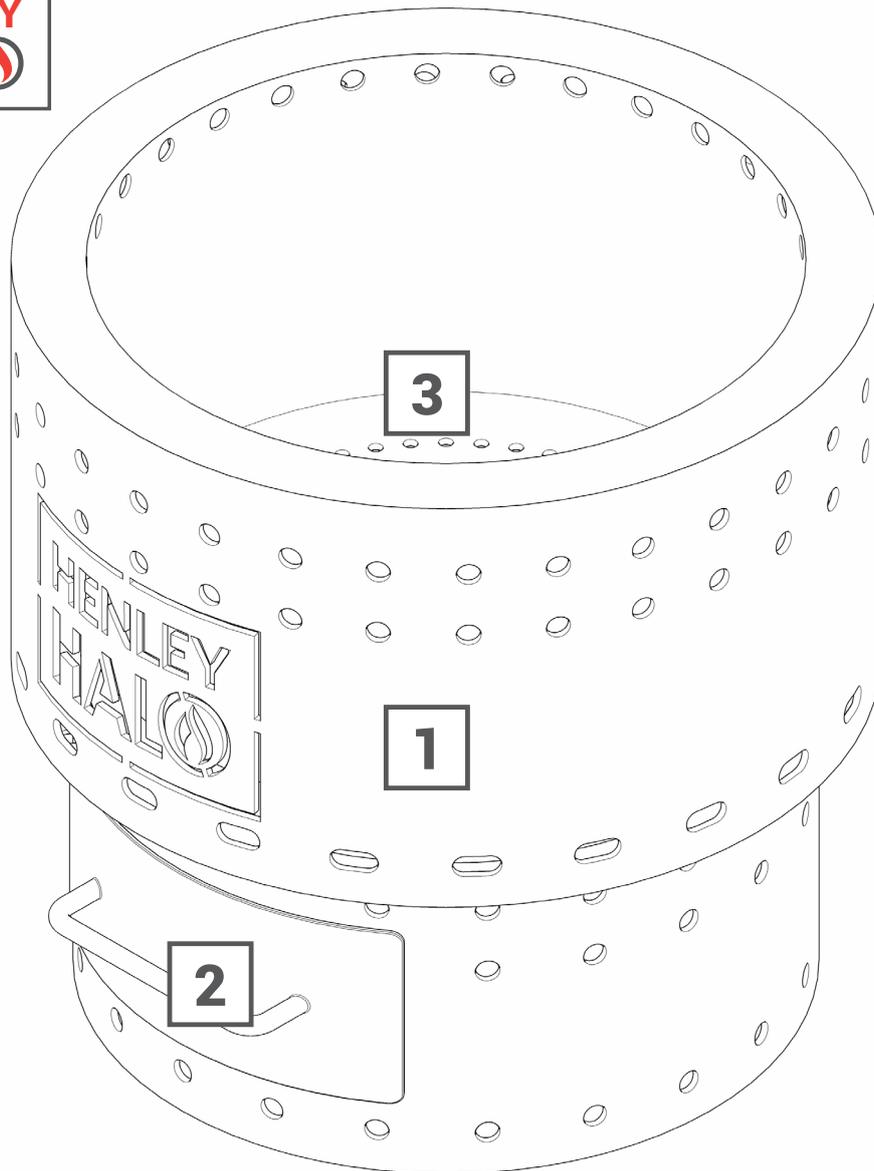

1. **Henley Halo**
2. **Ash drawer**
3. **Fire Pit***



*Henley Halo Fire Pit designed for use only with wood pellets.

Lighting your Henley Halo Wood Pellet Fire Pit

1. Place your Halo on a on a solid non-combustible surface such as a concrete path or patio slab.
Note: Not suitable for use on wooden or composite decks.
2. Fill your Halo with approximately 50mm(2") of wood pellets.
3. Place a fire lighter in the centre of the pellets and light it.
Note: Do not use any flammable liquids such as BBQ lighter fluid or petrol.
4. It will take approximately 5 – 8 minutes for the wood pellets to fully catch fire depending on the quality of the pellet. Once the inner wall of the Halo has heated up the flame will lick up around the side to the holes at the top creating a beautiful halo-like dancing flame.
5. When the flames start to die down top up your Halo with a few scoops of wood pellets using a metal scoop. Be careful not to smother the fire as this will cause excessive smoke as the new pellets catch fire.
6. Once the fire has gone out please let your Halo cool completely before cleaning it.
7. To clean, simply remove the ash drawer and dispose of the cooled ash.
8. Replace the ash drawer and store your Halo in a safe place.

Notes:

- The Henley Halo is for outdoor use only. Please do not use your Halo indoors or in any other enclosed areas.
- Do not use your Henley Halo until you have fully read and understand the instructions outlined above.
- The Henley Halo must not be operated by children.
- Never leave a lit Henley Halo unattended.
- Always place your Henley Halo on a solid, level, non-combustible surface such as concrete rock or stone.
- Not suitable for use on wooden or composite decking.
- Henley Halo Fire Pit designed for use only with wood pellets.
- Do not light near any flammable gases, liquids or combustible materials.
- Do not use your Henley Halo under any roof structures or combustible constructions.
- Do not use your Henley Halo near any low hanging trees or shrubs.
- Be sure to empty and clean your Halo before every use.
- Do not use in windy conditions.
- Do not use flammable liquids such as lighter fluid, petrol, kerosene or alcohol to light your Henley Halo.
- All surfaces of the Henley Halo will get hot when in use. Do not touch or try to move your Halo until it has fully cooled down.
- Do not dispose of the ashes until they have fully extinguished and are safe to dispose.



A large white rectangular area with rounded corners, containing ten horizontal dotted lines for writing.